
 


supervised system

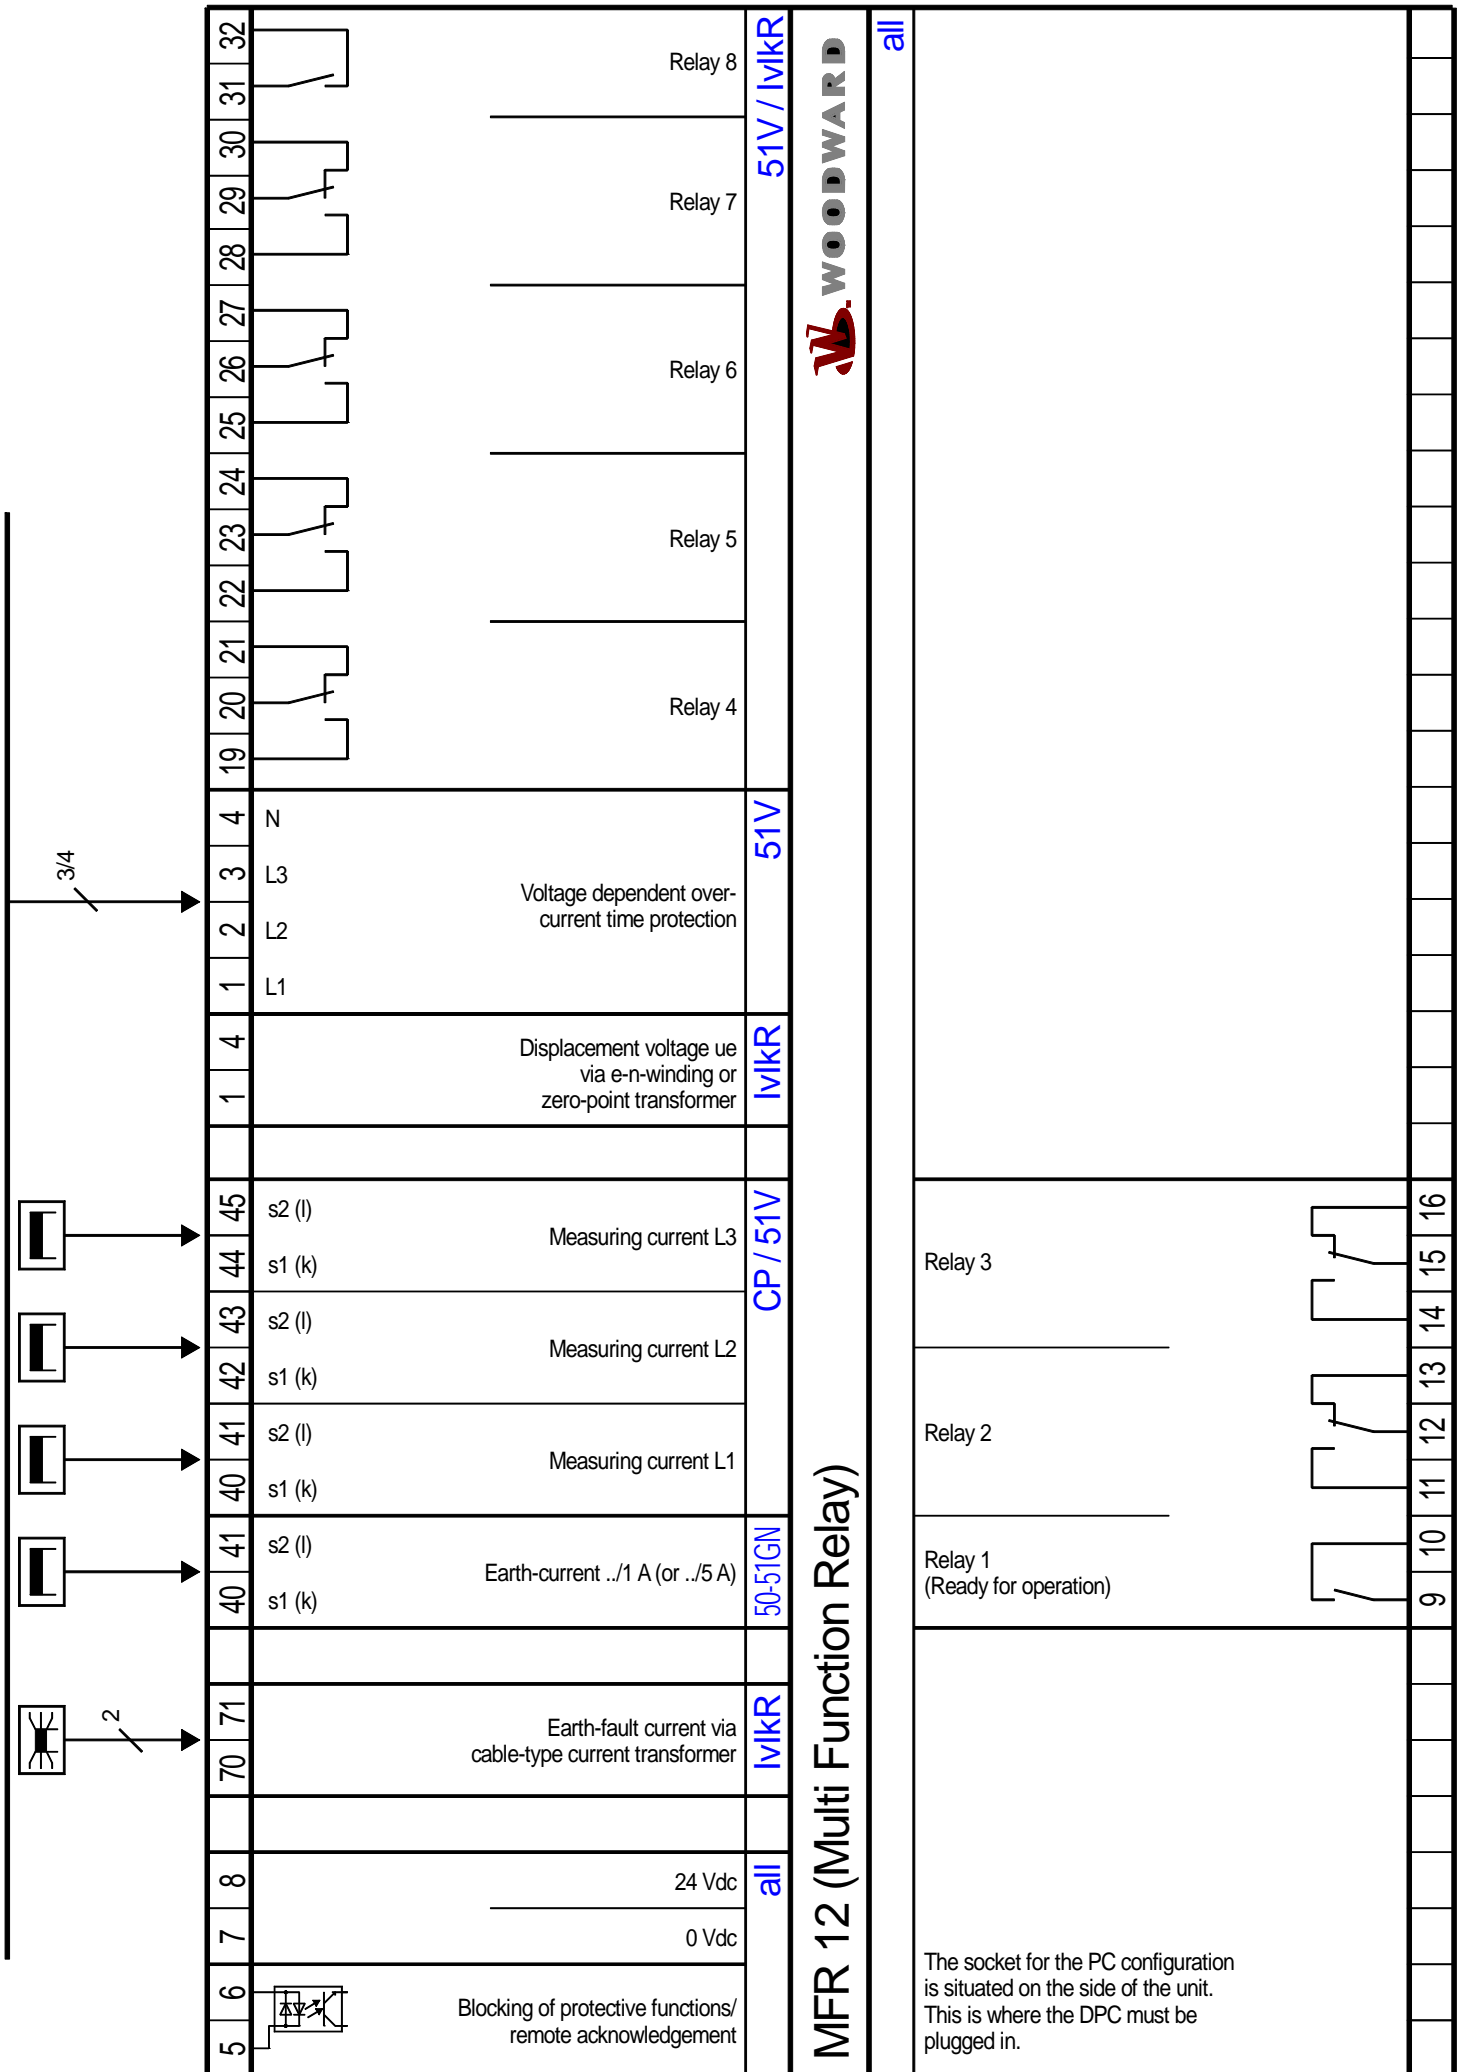

MFR 12 (Multi Function Relay)



all

The socket for the PC configuration is situated on the side of the unit. This is where the DPC must be plugged in.